


This information provided by:



Gross Automation
www.grossautomation.com

Call Toll Free:
800-349-5827

CARLON

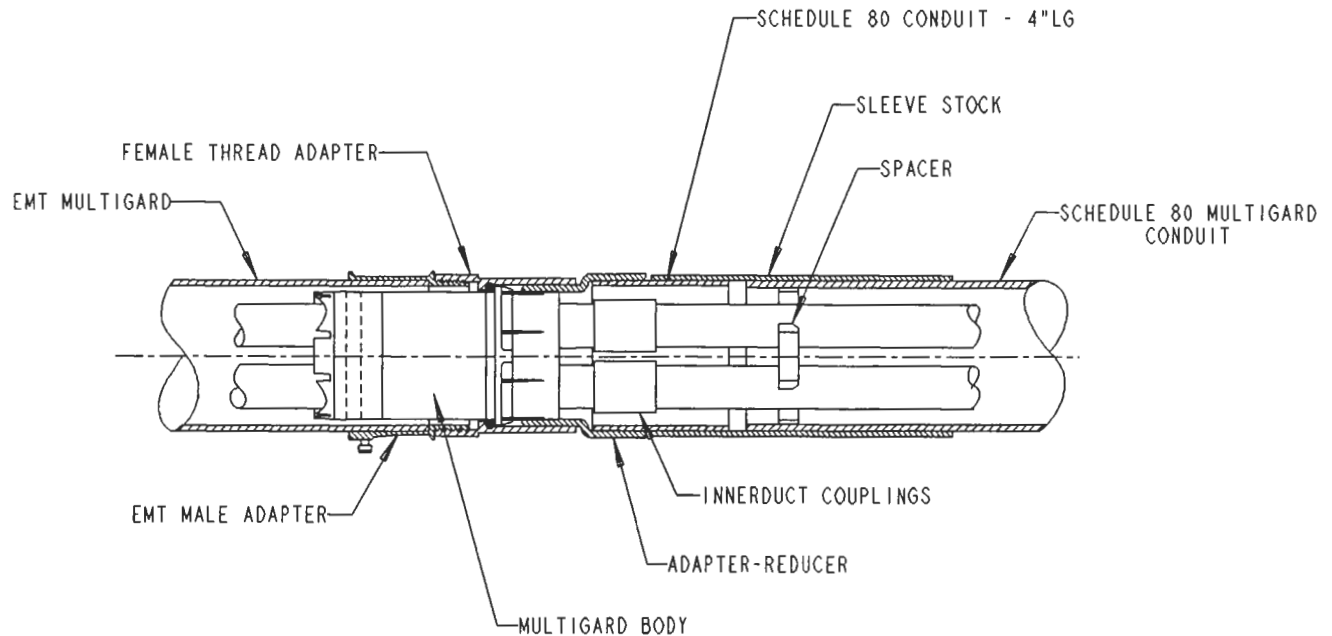

NOTES:

1. SLIDE EMT MALE ADAPTER ONTO EXISTING EMT MULTIGARD.
2. SCREW ON FEMALE THREADED ADAPTER AND SLIDE MULTIGARD BODY INTO FEMALE THREADED ADAPTER.
3. APPLY CEMENT TO ADAPTER-REDUCER AND SLIDE INTO FEMALE THREADED ADAPTER.
4. APPLY CEMENT TO SCHEDULE 80 CONDUIT - 4"LG AND SLIDE INTO ADAPTER-REDUCER.
5. SLIDE SLEEVE STOCK ONTO SCHEDULE 80 MULTIGARD CONDUIT AND PUT SPACER IN PLACE.
6. APPLY CEMENT TO INNERDUCT COUPLINGS AND SLIDE ONTO MULTIGARD BODY AND MULTIGARD INNERDUCTS.
7. APPLY CEMENT TO SCHEDULE 80 CONDUIT - 4"LG. AND TO MULTIGARD CONDUIT AND SLIDE SLEEVE STOCK OVER JOINTS. CEMENT ENDS OF SLEEVE STOCK.

TITLE: SCHEDULE 80 TO EMT ADAPTER - 3WAY/4WAY		DRN: DPR	DATE: 11-15-01	PART NO: MDAE3/MDAE4
LAMSON & SESSIONS	ALL DRAWINGS ARE THE PROPERTY OF LAMSON & SESSIONS AND SHALL NOT BE REPRODUCED IN ANY FORM WITHOUT LAMSON & SESSIONS' APPROVAL AND ARE TO BE PROMPTLY RETURNED UPON REQUEST.	APP: CAH	DATE:	DRAWING NO: AC04054
				REV.